

#### CUSTOMER SUPPORT

At Precision Products, Inc. delivering quality, value and outstanding service is our goal. However, sometimes parts do become damaged or lost during transport from our facilities to the store. **If you have any problems, please do not return this merchandise to the store. Call us and we will take care of any problem you may have with this unit.**

Phone (800) 225-5891 Ext. 204

INSPECTOR

#### HOW TO ORDER

##### REPLACEMENT PARTS:

When ordering parts always give model number, part number and part description.

Send To: Parts Division  
316 Limit Street  
Lincoln, IL 62656

Phone (800) 225-5891  
(217) 735-1590 Ext. 204

FAX (217) 735-2435  
www.precisionprodinc.com

#### LIMITED WARRANTY

This unit is warranted against defects in materials and workmanship to the original purchaser, under normal use and service, for a period of ninety (90) days from date of sale. During the Warranty Period, we will repair or replace at our option free of charge to the original purchaser, any part of the Unit that our examination shows to be defective in workmanship or materials. This Warranty **Does Not** apply to damage caused by misuse, abuse, neglect, accident, normal wear, or alterations by unauthorized persons.

#### SB4000RDGY PARTS LIST

Retain for future reference


| Ref Part No | Description              | Qty | Ref No | Part No | Description               | Qty |
|-------------|--------------------------|-----|--------|---------|---------------------------|-----|
| 1           | Hopper                   | 1   | 12     | 1868    | 1/4 x 2-1/4 Carriage Bolt | 1   |
| 2           | 2699GYOS Axle            | 1   | 13     | 1678    | 1/4 x 2 Carriage Bolt     | 6   |
| 3           | 2614 Spinner Disc        | 1   | 14     | 1086    | 1/4 x 2 Hex Head Bolt     | 2   |
| 4           | 2610GYOS Leg Stand       | 1   | 15     | 1051    | 1/4 Spring Nut            | 2   |
| 5           | 1552K Wheel              | 2   | 16     | 2828    | 1/4 Wing Nut              | 3   |
| 6           | 2658G Gear Case Assembly | 1   | 17     | 1270    | 1/4 Hex Head Nut          | 4   |
| 7           | 3466GYOS Support         | 2   | 18     | 1008    | 1/2 Retaining Ring        | 1   |
| 8           | 2441 Control Cable       | 1   | 19     | 1042    | Hitch Pin Clip            | 1   |
| 9           | 1307 Slide Plate         | 1   | 20     | 1053    | 7/8 Tube Plug             | 2   |
| 10          | 2838GYOS Handle          | 1   | 21     | 1040    | 1/2 Hub Cap               | 2   |
| 11          | 2415 Foam Handle Cover   | 1   | 22     | 2680    | 1/2 x 1 Spacer            | 2   |

**TIP:** Many of these hardware parts can be purchased at your local hard

## USING YOUR SB400RDGY BROADCAST SPREADER

### TO USE

Unscrew the wing nuts and remove the 1/4-20 carriage bolts. Slide the handle in the tubes, line up the holes, replace the carriage bolts and tighten wing nuts on the handle.

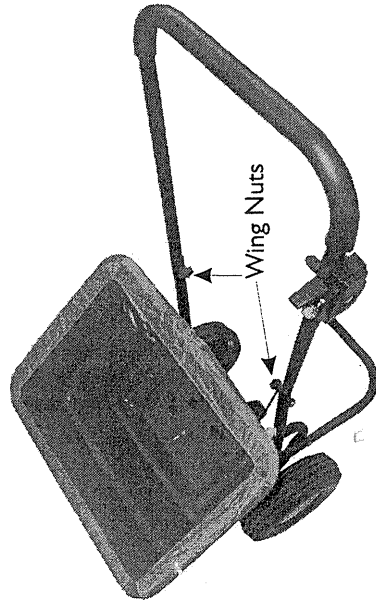


### BROADCAST SPREADER OPERATION

1. Always have the control lever in OFF position before filling the hopper.
2. Always push the spreader forward to operate; do not pull backwards.
3. Start walking forward before pushing the control lever to the ON position. Pull the control lever to OFF position before stopping or turning.

**DO NOT allow spreader to sit stationary with material in the hopper and control lever in the ON position.**

4. Hold the handle at a height that will keep the hopper level.
5. Push the spreader at a steady, brisk pace (approximately 3 mph is recommended).
6. To avoid misses or striping, space each pass across the lawn so approximately 20% of the spread width overlaps onto the previous pass. This provides a "feathered" overlap to even out distribution over the width of the spread.

**CAUTION: care must be taken with any weed killer, pesticide, or combination product. They can be harmful to other plant life in the yard.**

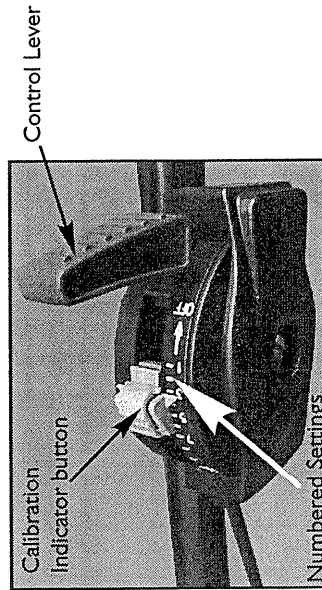

### USING YOUR SPREADERS CONTROLLER

Settings are made by pushing down on the Calibration Indicator button and setting to the desired number on the Control Cable assembly.

**ON -- Push the Control Lever forward until it stops against Calibration Button.**

**OFF -- Pull Control Lever back until it stops.**

### MAINTENANCE INSTRUCTIONS

1. Empty hopper after each use. Do not store spreader with material left in hopper.
2. Wash spreader thoroughly and wipe dry.
3. Lubricate all moving parts. Use a grease gun to apply grease to the gearbox assembly. (Caution do not pack gear case full of grease.) Apply oil to spinner shaft (including area shaft extends through hopper), slide plate and where the spinner shaft and axle extend through the gearbox.

**SEE APPLICATION CHART FOR SETTING INFORMATION.**